

BHPR - Shut-off mechanism assembly guide

This guide shows the assembly steps of the shut-off mechanism.
Refer to the BHPR nozzle installation guide for nozzle - machine installation instructions.

Legend



Tool



Lubricate all threads with high temperature grease




Manually




Attention

1

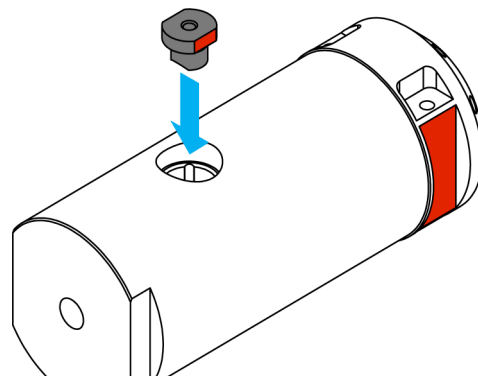


2

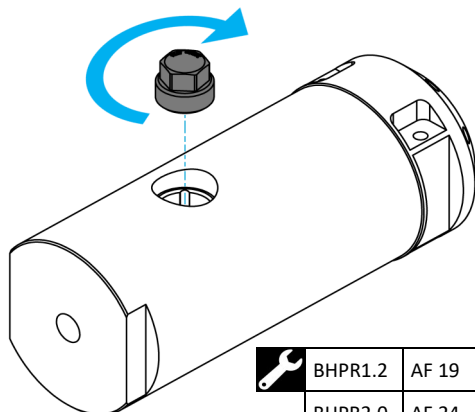

BHPR1.2	AF 19	80Nm
BHPR2.0	AF 24	340Nm


3

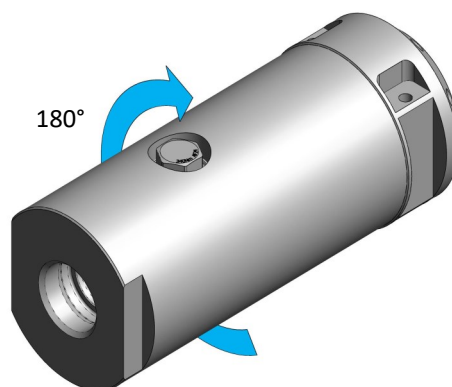

4




Align slot

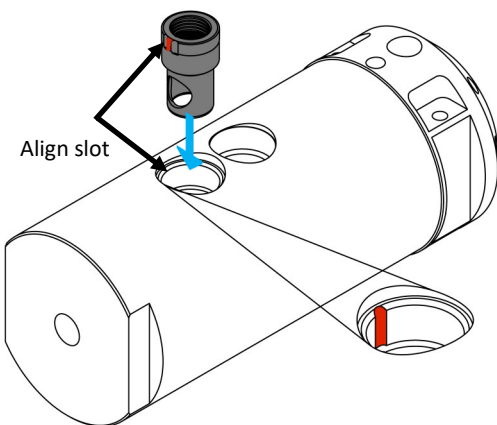


5



Align slot

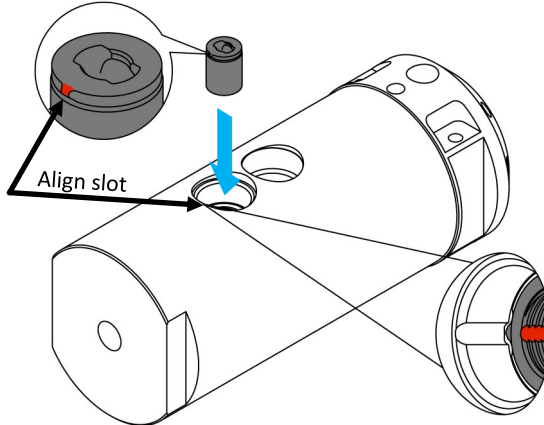









6

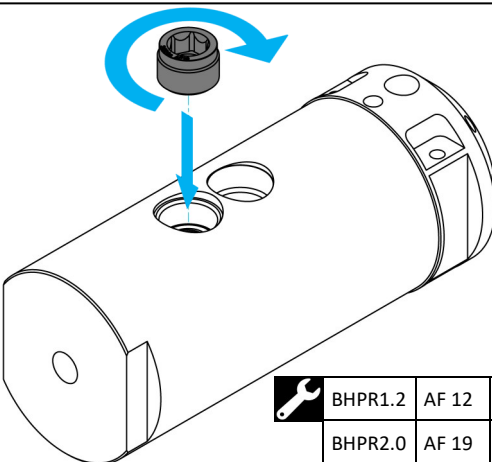

BHPR1.2	AF 12	80Nm
BHPR2.0	AF 19	340Nm

7

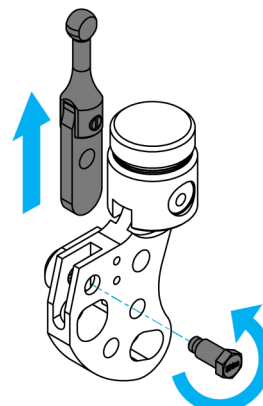

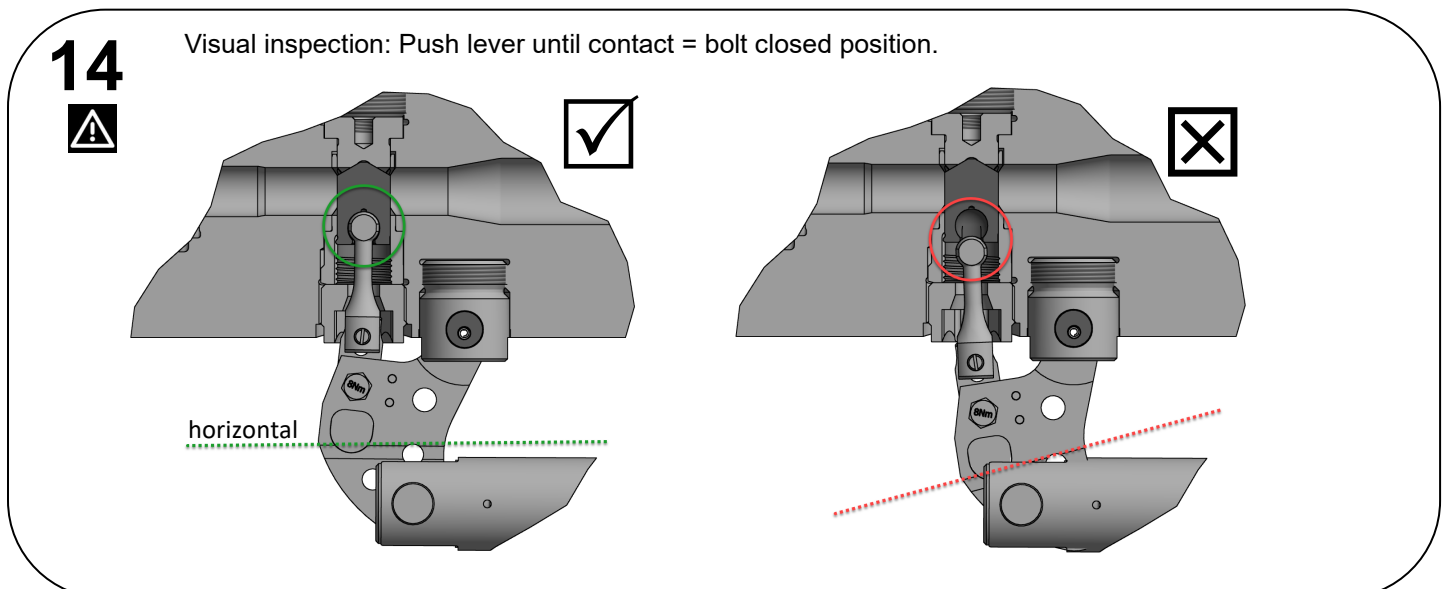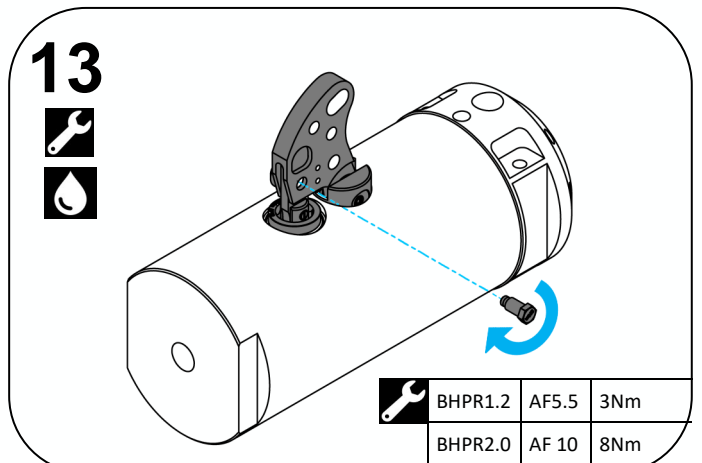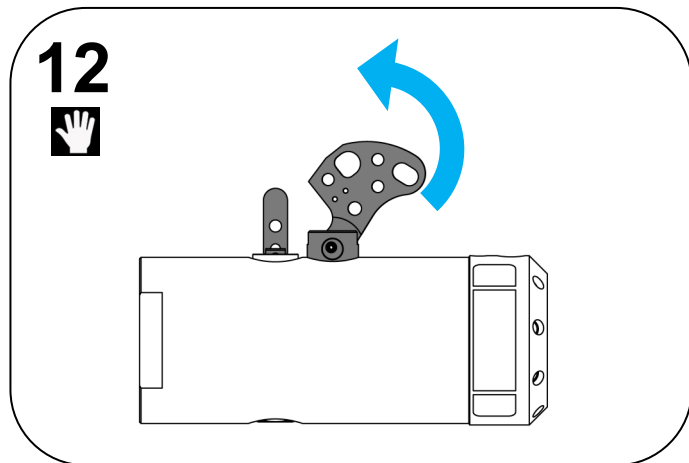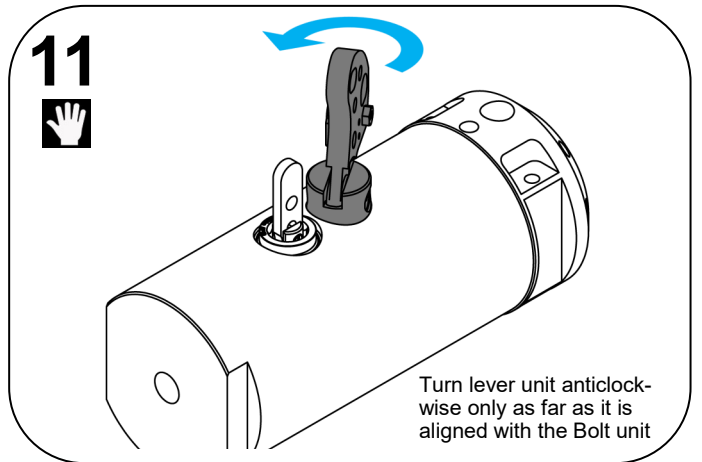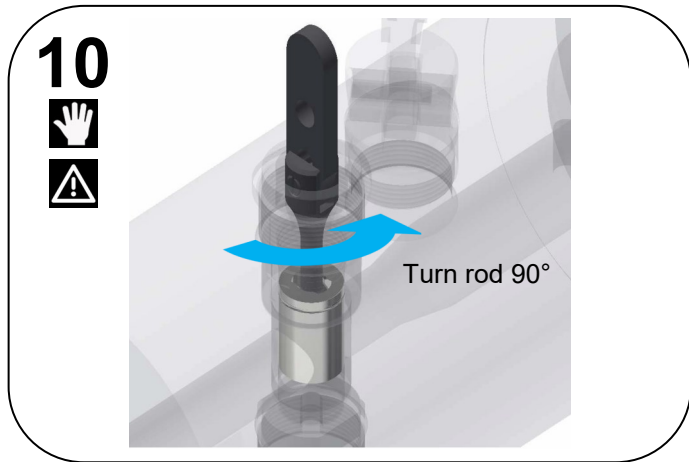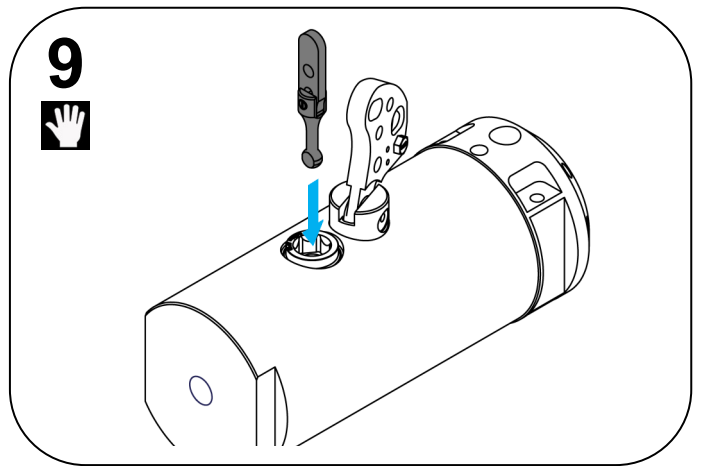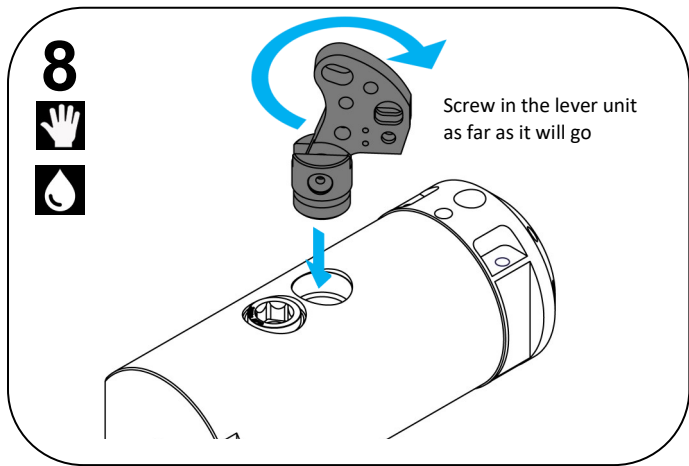



herzog systems ag

Feldhofstrasse 65
CH-9230 Flawil, Switzerland

Tel. +41 71 394 19 69

Fax.+41 71 394 19 60

www.herzogsystemsag.com

sales@herzogsystemsag.com



Herzog (China) Co. , Ltd

Lane 68 Fenglin Road
PR China, 315822 Ningbo

Tel. +86 574 8696 3001 605

Fax.+86 574 8696 3002

www.herzogsystemsag.com

asia@herzogsystemsag.com



Herzog Injection Technology, Inc.

PO Box 384, Essex
MA 01929, USA

Tel. +1 978 768 0090

Fax.+1 978 768 0094

www.herzogsystemsag.com

usa@herzogsystemsag.com



Herzog Japan

Mr. Naoto Kambara
Taihei Tehno Service Co, Ltd (TTS)
242-00001 Japan

Tel. +81 46 240 6216

Fax. +81 46 240 6217

www.herzogsystemsag.com

japan@herzogsystemsag.com